





There are 3 possibilities:
From the opening screen,
select from preset PROGRAMS,
NEW PROGRAM or
VIA (optional feature).
To add a new program,
please refer to the enclosed
user manual.

5 HaTaasia Street Ramat Gabriel Ind. Park, Migdal HaEmek 23101, Israel Tel: +972 (0)3 562 0428

Fax: +972 (0)4 6042040

www.shenpaz.com





Get Started Guide



## Blazing the way to simple sintering

Thank you for purchasing the "Blazir" sintering furnace



Assure Blazir is disconnected from power supply.

Installing the heating elements





## Step 1

Take off the top cover with exhaust airpipe by unscrewing the 4 screws located in each corner of the top




## Step 2

From the accessory bag take the connection metal strips, tools, and extra screws



## Step 3

Carefully unpack each heating element from their box and place into furnace one by one. NOTE: heating elements are very fragile.

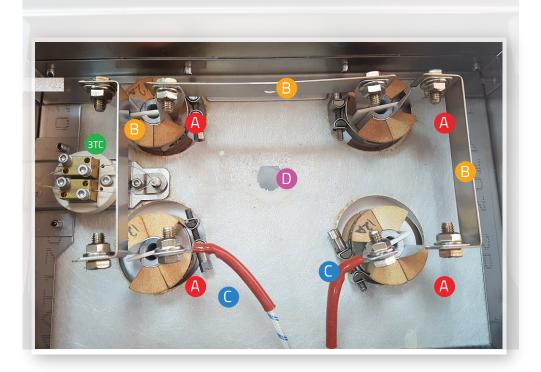

- Insert each of the 4 heating elements into their placement on the top of the muffle, paying attention that the bottom of the HE is also correctly aligned in the base of the muffle.
- THIGHLY connect the 3 metallic strips with provided hexa screws as per image above. NOTE exact position of strips.
- Check that the TC is not in contact with the metallic strips
- Connect each power cable with screws to the respective heating element (see above)
- Close top of furnace by screwing the cover back on. ASSURE that the edge of exhaust pipe is in hole.
- Connect furnace to main current and turn on the furnace. BLAZIR is sinter ready!